




DAGENDOR®

INSTALLATION INSTRUCTIONS OF FOLDING CLOSURES

Before proceeding, please make sure that the site is compliant with the following steps. If not, please contact your sale's representative or our head office at **1-800-301-0097**.

1.-Make sure that the **site measurements** (height, width, configuration) correspond with the shop drawing(s).

2.-Verify that the **bulkhead is strong enough** to carry the closure without sagging, especially in the stacking area.

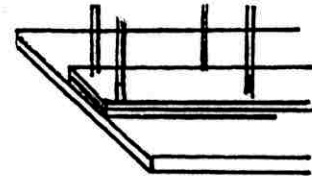

3.-Check that you have a **clearance of 4 1/2"** each side of **⌀** of track for the entire length of the closure, stacking included. Make sure there are no obstructions.

4.-Ensure that the **depth of the stacking area** is sufficient. The rule of thumb is 2" per linear foot of curtain. (Ex.:A curtain of 12'0" wide would necessitate 24" of stacking space).

INSTALLATION

5.-To install the track, begin by inserting joint alignment pins into the track sections and continue by installing the longest length of track, moving towards the locking point(s). The screws should be centered 6" apart in stacking area and on curve(s), 12" apart elsewhere. Using a flat screwdriver and a hammer, push all four joint alignment pins halfway across each section of track(s).

Make sure that all **joints are tight, aligned and deburred**.

Leave one section of track open to insert the curtain.



6.-Remove the curtain's section(s) from the crate and start inserting the rollers one by one (making sure that **none are sideways**) into the open section of the track. As you did with the track(s), start with the section(s) closest to the stacking area and move towards the locking point. (Section's sequence is shown on packing slip; A-B-C-...). Join closure's sections together with steel rivet (1/8" - 5/8").

